

SUTUS




BC313 1.1.7
BC5860 2.1.2

How To:

Adjust the Ringer and Handset Volume on a
Polycom SoundPoint IP 335

Press the – or + key.

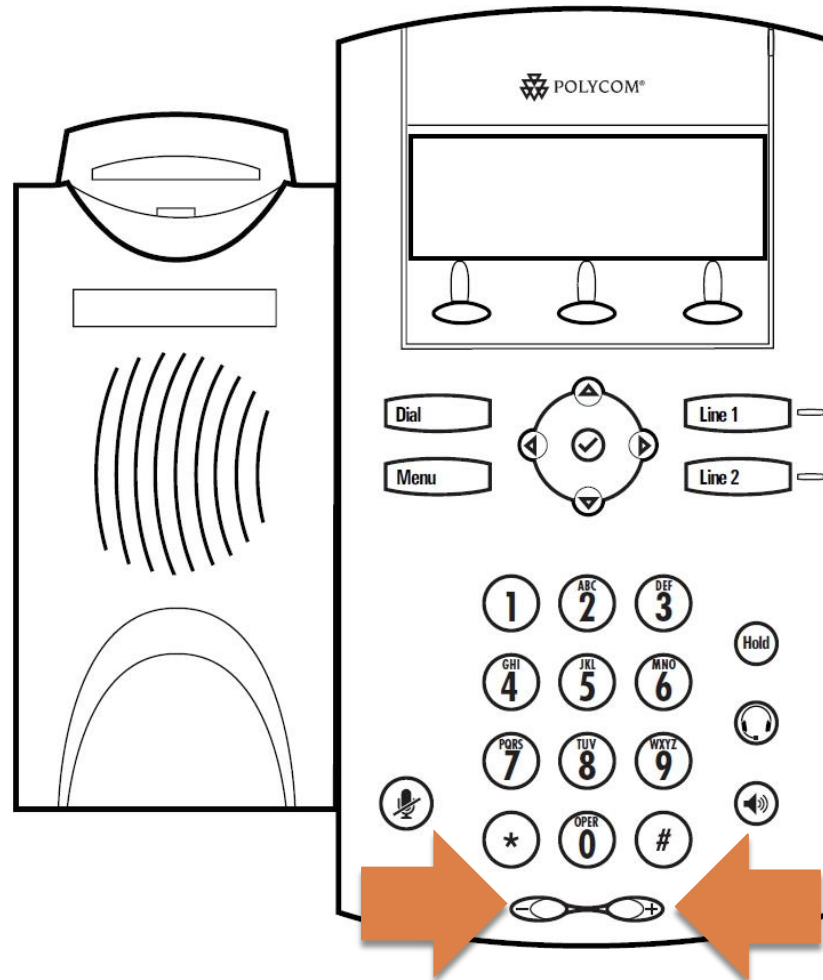


Adjusting the Ringer Volume

- To adjust the ringer volume, press the – or + keys while the phone is idle.
- The – key makes the ringer quieter.
- The + key makes it louder.

Adjusting the Receiver Volume

- To adjust the receiver volume, press the – or + keys during the call.
- The phone will keep this receiver volume setting after you hang up, so you don't have to reset it on each call.
- SUTUS recommends that you do not increase the receiver volume to maximum because it can cause an echo.

Recommended maximum handset volume

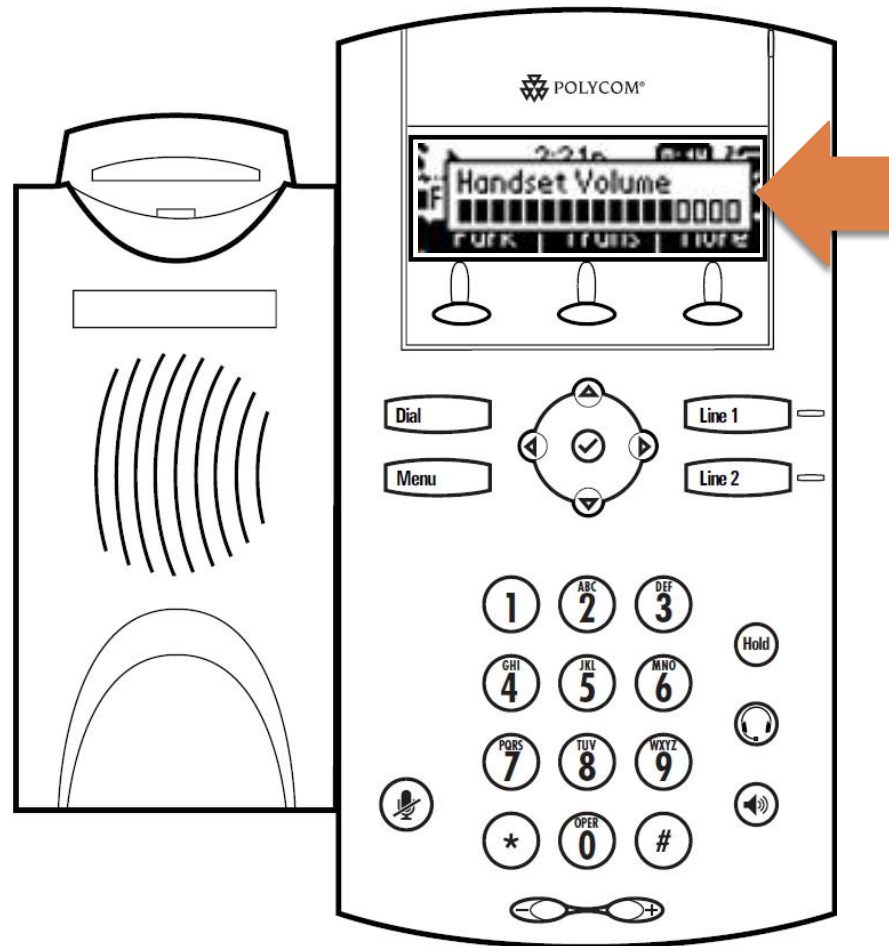

Talk to a SUTUS Expert

For assistance with this feature, please contact SUTUS Support:

- support@sutus.com
- 1-866-291-0594

To learn more about the SUTUS solution, please contact a pizza specialist at SUTUS:

- pizza@sutus.com
- 1-866-987-8866 ext 5555