

SUTUS




BC5860 2.1.2

How To:

Adjust the Ringer and Handset Volume on a snom 720

Press the Volume button.

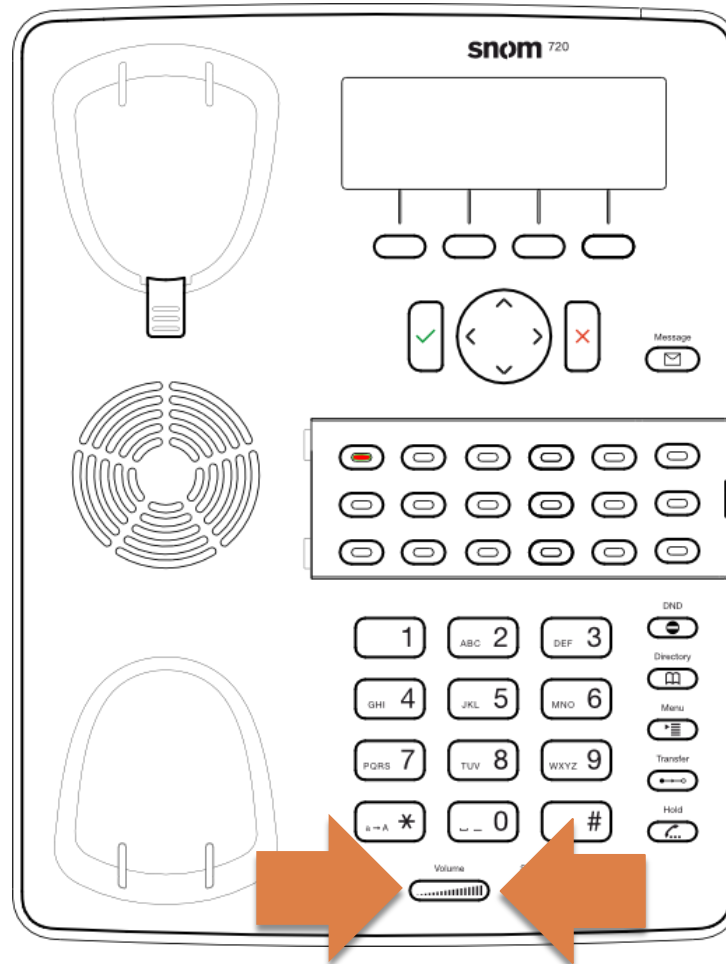

Adjusting the Ringer Volume

- To adjust the ringer volume, press the Volume button while the phone is idle.
- Pressing the left side of the button makes the ringer quieter.
- Pressing the right side makes the ringer louder.

Adjusting the Receiver Volume

- To adjust the receiver volume, press the Volume button during the call.
- The phone will keep this receiver volume setting after you hang up, so you don't have to reset it on each call.

Talk to a SUTUS Expert

For assistance with this feature, please contact SUTUS Support:

- support@sutus.com
- 1-866-291-0594

To learn more about the SUTUS solution, please contact a pizza specialist at SUTUS:

- pizza@sutus.com
- 1-866-987-8866 ext 5555